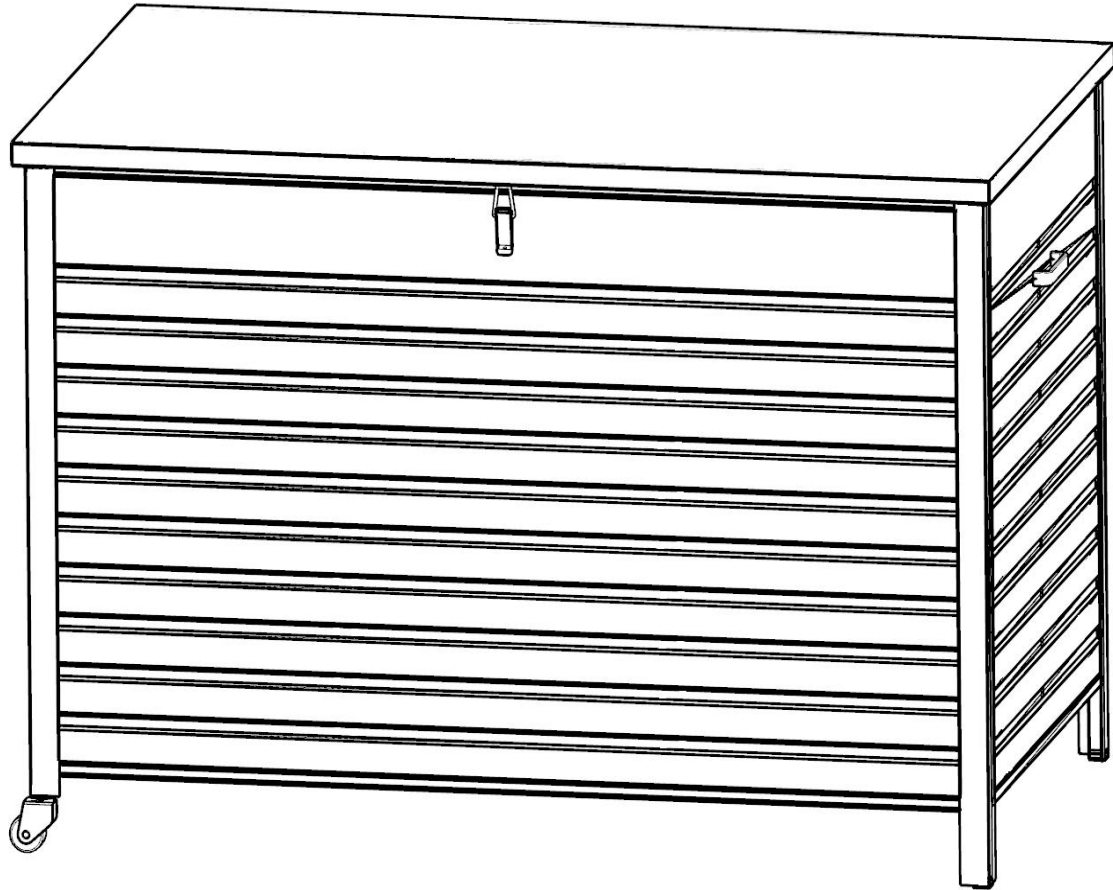


VENTURE DESIGN

HOME & INTERIOR



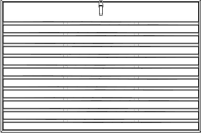
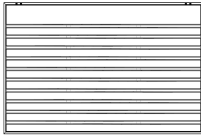


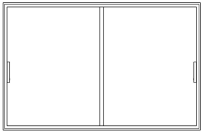

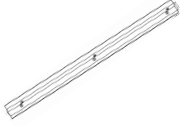












1012-408
Tiana cushion box

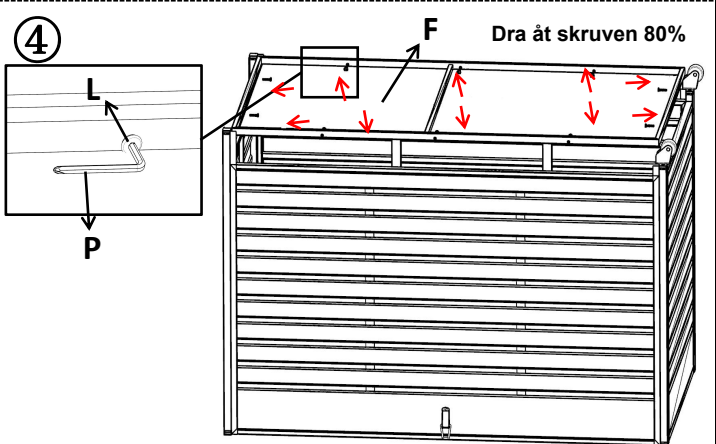
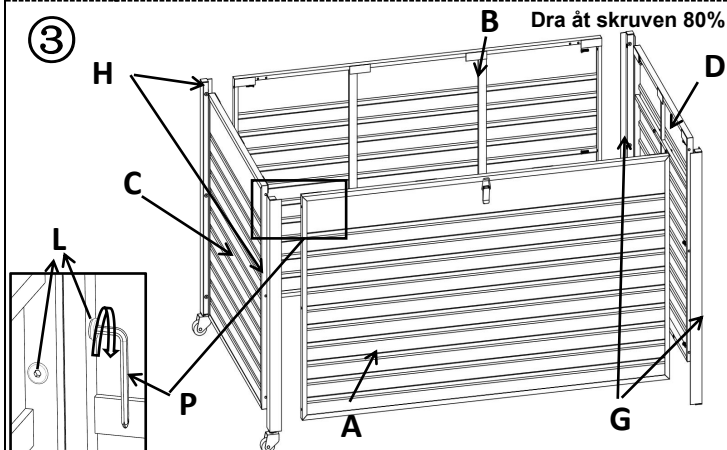
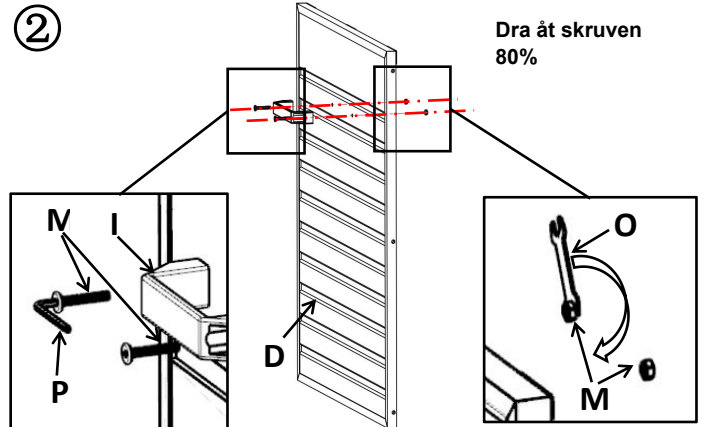
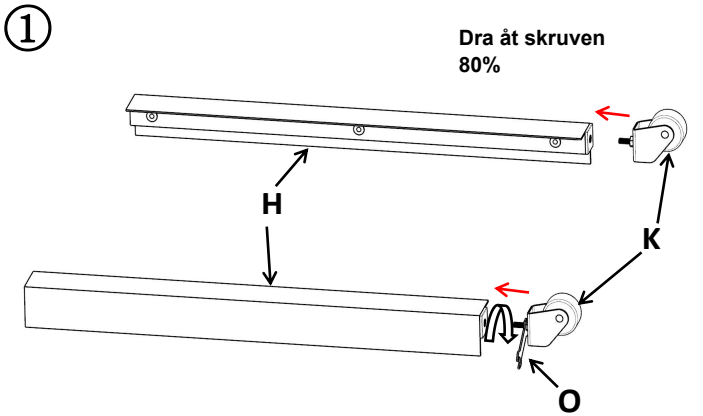
Monteringsanvisning - AssemblyInstruction - Einbauzeichnung



1012-408 Assembly Instruction

Tiana cushion box

A	1pc	B	1pc	C	1pc	D	1pc	E	1pc				
													
Front side piece / 1999-5696		Back Side piece / 1999-5698		Left Side piece / 1999-5082		Right Side piece / 1999-5083		Cover plate / 1999-5700					
F	1pc	G	2pcs	H	2pcs	I	1pc	J	2pcs	K	2pcs	L	36pcs
													
Bottom cover / 1999-5081		Long feet		Short feet		Handle		Gas spring / 1999-5079		Castor		M6*25	
M	2pcs	N	2pcs	O	1pc	P	1pc	Q	1pc	R	6pcs		
													
M6*35 Screw&nut		Plastic washer		Wrench		Hexagon Spanner		Inner cloth cover / 1999-5078		M6*20			



VENTURE DESIGN
HOME & INTERIOR

1012-408
Assembly Instruction

Tiana cushion box

