

# Installation guide

## MODERN door canopy

Step-by-step instructions for a safe and clear installation.



### Before you begin

Read the full guide before starting. We recommend installing the canopy with two people. Always make sure the wall is load-bearing and use screws and anchors suitable for the wall type.

### Tools required

Tape measure • spirit level or laser level • pencil/marker • drill/driver • correct drill bit for the wall type • bit/socket for supplied screws • ladder • protective gloves and safety glasses.

### Screws and fixings

Fasteners for the product itself are included. Wall screws and wall plugs/anchors are not included because the correct fixing depends on whether the wall is timber, concrete, brick, metal, etc. Always use fixings approved for the substrate.

### How the system is built

MODERN is built from side brackets/consolas and roof sheets in modules. The same bracket is used both as an outer bracket and as a centre bracket. Roof sheets are available in two widths: 100 cm and 130 cm. Several sections are combined to achieve the ordered total width.

### Examples of module combinations

100 cm = 1×100 sheet, 2 brackets • 130 cm = 1×130 sheet, 2 brackets • 200 cm = 2×100 sheets, 3 brackets • 260 cm = 2×130 sheets, 3 brackets • 300 cm = 3×100 sheets, 4 brackets • 390 cm = 3×130 sheets, 4 brackets • 400 cm = 4×100 sheets, 5 brackets.

# Step-by-step installation

1

## Sort the parts and confirm the width


Lay out the brackets and roof sheets on a clean surface. Confirm the total width ordered and choose the correct drilling template in the appendix. This template defines the distance between the wall brackets.



2

## Mark the drilling pattern on the wall


Measure the installation position and mark a straight horizontal reference line. Transfer the measurements from the correct drilling template to the wall. Double-check that the drilling pattern matches the ordered width before drilling.

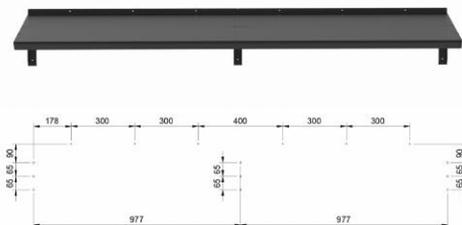

3

## Pre-drill and prepare the wall fixing

Pre-drill all holes according to the marking. Select the drill, screws and plugs/anchors according to the wall type. The brackets must be vertical and mounted at the same level so the canopy fits correctly and drains properly.

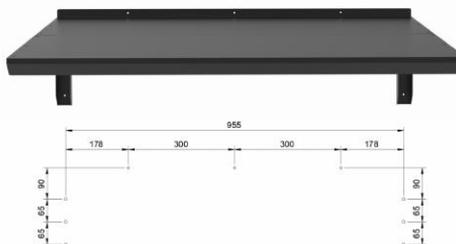

# Step-by-step installation


4

## Fix the brackets to the wall

Install all brackets on the wall according to the marked drilling pattern. Work from one side to the other and keep checking with a level so the brackets remain plumb and aligned at the same height.


## 5 Pre-assemble the inner roof sheet

Start with the inner roof sheet (part 2 in the sketch). Place the sheet on the mounted brackets and fasten it to the brackets using the supplied self-drilling screws with sealing washer/rubber spacer.

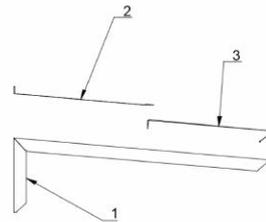

## 6 Install the outer sheet and finish

Then install the outer roof sheet (part 3). On the left and right outer brackets, use the outer holes. On canopies with several sections, two adjacent sheets share the centre bracket fixing as shown in the sketch. Tighten all screws evenly and carry out a final inspection.

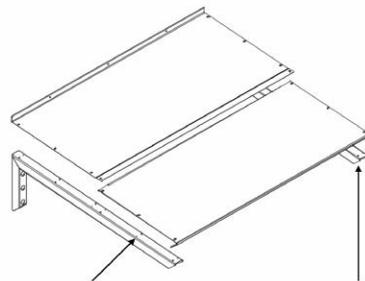

### Important

Always use the drilling template for your exact width. Incorrect spacing will prevent the roof sheets from matching the brackets. Also ensure enough clearance above the door and make sure the substrate is sound and load-bearing.


### Optional bracket support for heavy snow

A separate support brace is available as an accessory for MODERN. The brace is sold individually and is installed as a reinforcing arm underneath the bracket. It can be fitted to the outermost brackets and is especially recommended in areas with heavy snowfall. With the support brace installed, the canopy becomes even more rigid and can withstand higher snow loads.

## Appendix - drilling template

### Drilling template for canopy 100 cm

Important: Wall screws and plugs/anchors for wall mounting are not included. Use fixings suitable for the wall where the canopy will be installed.

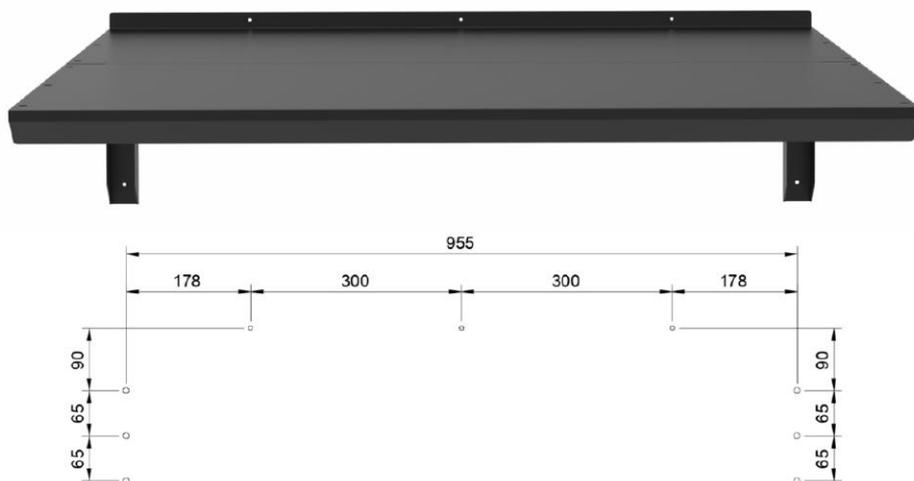


# Appendix - drilling template

## Drilling template for canopy 130 cm

Important: Wall screws and plugs/anchors for wall mounting are not included. Use fixings suitable for the wall where the canopy will be installed.


1

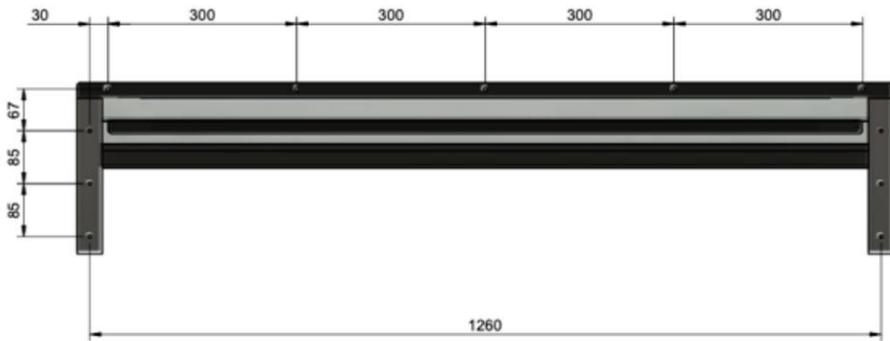

# Appendix - drilling template

## Drilling template for canopy 200 cm


Important: Wall screws and plugs/anchors for wall mounting are not included. Use fixings suitable for the wall where the canopy will be installed.

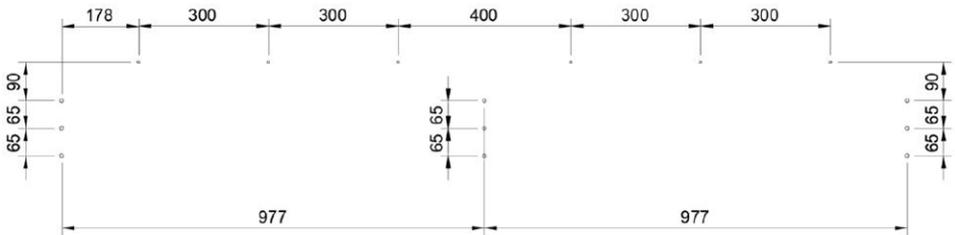

# Appendix - drilling template

## Drilling template for canopy 260 cm


Important: Wall screws and plugs/anchors for wall mounting are not included. Use fixings suitable for the wall where the canopy will be installed.

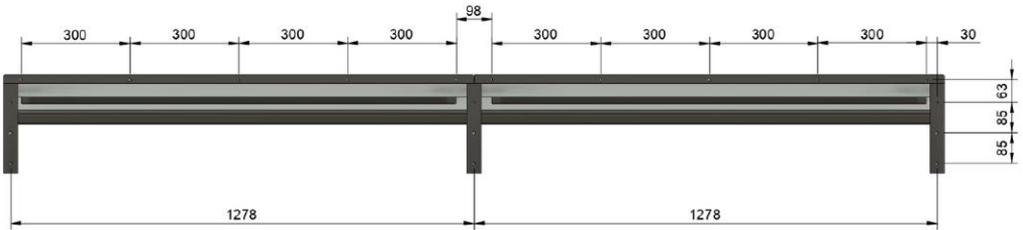

# Appendix - drilling template

## Drilling template for canopy 300 cm


Important: Wall screws and plugs/anchors for wall mounting are not included. Use fixings suitable for the wall where the canopy will be installed.

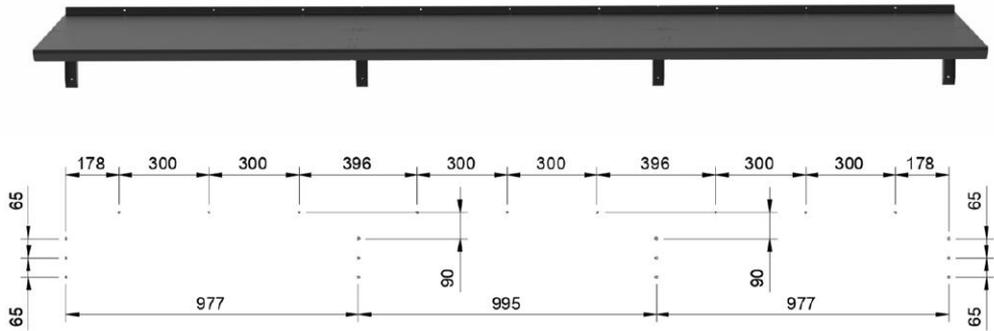

# Appendix - drilling template

## Drilling template for canopy 390 cm

Important: Wall screws and plugs/anchors for wall mounting are not included. Use fixings suitable for the wall where the canopy will be installed.

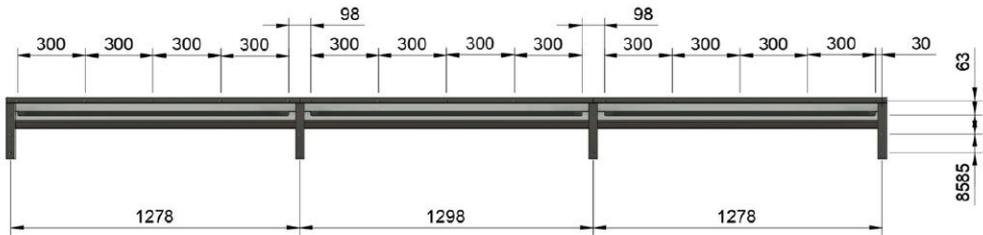

# Appendix - drilling template

## Drilling template for canopy 400 cm

Important: Wall screws and plugs/anchors for wall mounting are not included. Use fixings suitable for the wall where the canopy will be installed.

